ODYSSEYCONTROL

HELP GUIDE

# PAIRING AND USING WALL SWITCHES

## ABOUT

Wall Switches communicate via Bluetooth to the Node, giving you additional control of RV features.

**NOTE:** Any Wall Switch you install in your RV has been paired to the OdysseyLink at the factory and is ready for immediate use. If a Wall Switch isn't responding, it may need to be re-paired.

## PAIRING A WALL SWITCH TO THE ODYSSEYLINK


Up to two Wall Switches can be paired to the OdysseyLink.

To pair a Wall Switch to the OdysseyLink:

1. From the App home screen, press the Settings button.
2. Press **Wall Switches.**
3. Press **Add**.




4. On the Wall Switch you want to pair, press any two buttons at the same time.
5. Once pairing is successful, the newly-paired Wall Switch will appear in the Wall Switches list.

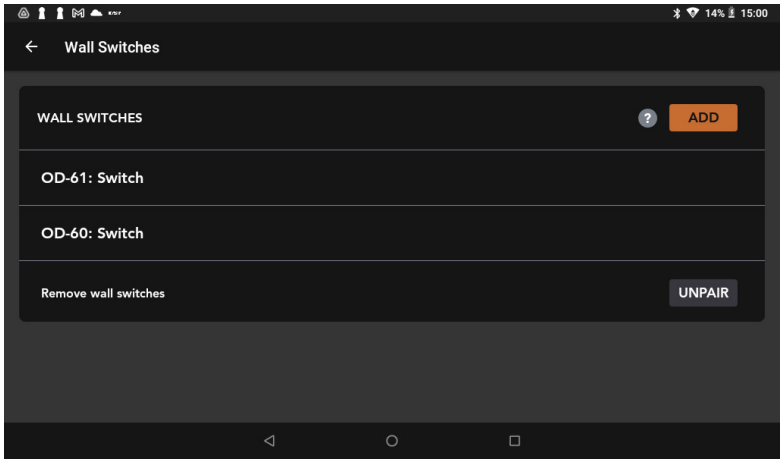

## UNPAIRING A WALL SWITCH FROM THE ODYSSEYLINK

To unpair a Wall Switch from the OdysseyLink:

1. From the App home screen, press the Settings button.
2. Press **Wall Switches.**
3. Next to Remove wall switches, press **Unpair.**
4. Red Unpair buttons will appear next to the Wall Switch listings. Next to the Wall Switch you want to unpair, press **Unpair**.
5. Press **Done**.




## CHECKING THE BATTERY IN YOUR WALL SWITCH

Wall Switches are powered by a standard CR2032 3V Lithium Cell coin battery.

To check if the battery needs replacing:

1. From the App home screen, press the Settings button.
2. Press **Battery Levels.**
3. Press any button on the Wall Switch you are checking.

Once the button has been pressed, the App will refresh with the Wall Switch battery status.

## REPLACING THE BATTERY IN YOUR WALL SWITCH

To replace the battery in a Wall Switch:

1. Unclip the Wall Switch button pad.
2. Using a flathead screwdriver, pry open the Wall Switch button pad and remove the battery from the holder.
3. Insert the new battery in the holder with the positive side facing up.

