BLACK JACK®

TRAILER JACK



USER MANUAL

Black Jack® Maxi

2000kg 12V DC

P/N: BJTJ-Maxi-1000, BJTJ-Maxi-1001

Please read and understand all instructions before use. Retain this manual for future reference.

www.blackjacktrailerjacks.com.au

More information https://www.caravansplus.com.au

More information https://www.caravansplus.com.au

BLACK JACK®

MAXI USER MANUAL

CONTENTS

1. Specifications	4
2. Introduction	4
3. Safety	5
4. Hazard Definitions	5
5. Work Area	5
6. Personal Precautions	6
7. Specific Safety Precautions	6
8. Electrical Safety	7
9. Assembly & Installation	8
10. Operation	9
11. Remote Operation	9
12. Unhitching The Trailer	10
13. Hitching The Trailer	10
14. Manual Override	11
15. Care & Maintenance	11
16. Optional Folding Foot	12
17. Troubleshooting	14
18. Warranty & Parts	16
19. Intellectual Property	16
20. Compliance	17

More information https://www.caravansplus.com.au

1. SPECIFICATIONS

Maximum Load Capacity	2000 kg
Stroke Length	450mm
Foot Plate	Removable 133mm diameter foot plate or optional folding foot
Handle	Manual crank override
Tube Diameter	58mm outer Dimension
Construction	Steel tubes and plate and polypropylene cover
Motor Type	Sealed encapsulated brushless motor
Finish	Powder coat tube, zinc plated inner and drop tubes
Overall Dimensions	H 835 x W 170 x D 130mm
Voltage Rating	12V DC
Circuit Protection	30A Blade Fuse, Intelli-Brake Motor
Current Rating	Maximum 28A (Extended), 6A (Retracted)
IP Rating	Minimum IP55

2. INTRODUCTION

Congratulations on your new Black Jack!

The Black Jack Trailer Jack is rated to support up to 2000kg trailer tongue weight and with the patented Black Jack Clamp, it can be fitted to any trailer A-frame.

The Black Jack Maxi represents the latest technology in electric jacks, and features:

- Auto Stop Function
- Remote Control Option
- Ball Bearing Worm Drive that provides greater efficiency

The Black Jack features an LED light to illuminate the hitch area at night and a built-in levelling gauge. It also features a high quality cover to protect it against dirt, moisture and harsh conditions that exist behind a tow vehicle.

It comes with a choice of 2 feet: The traditional leg extention foot that can be adjusted, and the amazing new Black Jack folding foot. The choice is yours.

More information https://www.caravansplus.com.au

3. SAFETY

WARNING! Read and understand all instructions before using this device. The operator must follow basic precautions to reduce the risk of personal injury and/or damage to the equipment.

Keep this manual for safety warnings, precautions, operating or inspection and maintenance instructions.

4. HAZARD DEFINITIONS

Please familiarise yourself with the hazard notices found in this manual. A notice is an alert that there is a possibility of property damage, injury, or death if certain instructions are not followed.

DANGER!
This notice indicates an immediate and specific hazard that will result in severe personal injury or death if the proper precautions are not taken.

WARNING!
This notice indicates a specific hazard or unsafe practice that could result in severe personal injury or death if the proper precautions are not taken.

CAUTION!
This notice indicates a potentially hazardous situation that may result in minor or moderate injury if proper practices are not taken.

NOTICE!
This notice indicates that a specific hazard or unsafe practice will result in equipment or property damage, but not personal injury.

5. WORK AREA

Operate in a safe work environment. Keep your work area clean, well-lit, and free of distractions. Keep anyone not wearing the appropriate safety equipment away from the work area.

Store unused devices properly in a safe and dry location to prevent rust or damage. Lock devices away and keep out of the reach of children.

Do not install or use in the presence of flammable gases, dust, or liquids.

More information https://www.caravansplus.com.au

6. PERSONAL PRECAUTIONS

Control the device, personal movement, and the work environment to avoid personal injury or damage to device.

Do not operate any device when tired or under the influence of drugs, alcohol, or medications.

Avoid wearing clothes or jewelry that can become entangled with the moving parts of a device. Keep long hair covered or bound.

7. SPECIFIC SAFETY PRECAUTIONS

WARNING! DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to the device safety rules. If you use this device unsafely or incorrectly, you can suffer serious personal injury.

This device was designed for a specific function. Do not modify or alter this device or use it for an unintended purpose.

Do not attempt to lift more than the 2000 kg maximum lifting capacity of this jack.

Always place the jack on a hard, level surface capable of supporting the load. Allow enough clearance around the jack and the load for movement.

Never place any part of your body beneath the trailer that is supported by the jack. A jack failure or shifting of the trailer may cause it to collapse and cause a serious injury or death.

Keep your limbs and body away from any pinch or shearing points while using the jack. Failure to do so may result in a serious injury.

Inspect the jack before each use. DO NOT use if bent, broken, cracked or otherwise damaged, if any suspect parts are noticed or it has been subjected to a sudden or unexpected load (shock loading).

Ensure that all applicable pins, bolts, and nuts are firmly tightened before using.

Do not allow untrained persons to operate the jack. Secure the load, trailer, and vehicle by chocking all the wheels before using.

Do not place your hands between moving components.

More information https://www.caravansplus.com.au

Use only with accessories rated to handle the forces exerted by the device during operation. Other accessories may break and forcefully launch pieces.

Ensure that there are no obstructions under the load and that the area is clear before lowering it.

Ensure that the lock pin is properly inserted through the inner and outer tubes, and that there is no load on the trailer before using the manual drop leg extension.

Do not adjust the drop foot while there is a load on the Black Jack.

You must have the manual handle installed and held firmly in place before unlocking the manual over-ride. Failure to do so may result allow the ball bearing worm drive to allow the jack to move free, resulting in the jack lowering.

8. ELECTRICAL SAFETY

Disconnect device from power source before cleaning, servicing, changing parts/ accessories or when not in use

Protect yourself against electric shocks when working on electrical equipment. Avoid body contact with grounded surfaces. There is an increased chance of electrical shocks if your body is grounded.

Do not expose device to rain or wet conditions. Water entering a power device will increase the risk of electric shock.

Do not alter any parts of the device or accessories. All parts and accessories are designed with built-in-safety features that may be compromised if altered.

Make certain the power source conforms to requirements of your equipment (see Specifications).

Do not operate this device if the leads are frayed or damaged as an electric shock or surge may occur, resulting in personal injury or property damage.

Inspect the leads for cracks, fraying or other faults in the insulation before each use. Discontinue use if the leads feel more than comfortably warm while operating the device.

Keep all connections dry and off the ground to reduce the risk of electric shock. Do not touch the leads with wet hands.

Keep the leads away from heat, oil, sharp edges or moving parts.

More information https://www.caravansplus.com.au

Install caps over the battery terminals to prevent accidental contact. Discharged batteries may still carry charges and cause electric shock upon contact.

9. ASSEMBLY & INSTALLATION

1. Attach and secure the trailer's coupler to the tow vehicle's hitch. Chock the wheels of the trailer and vehicle. Also apply the vehicle's parking brake.
2. Mount the Black Jack bracket to the chassis using the 4 bolts and lock nuts.
3. Slide the tube into the Black Jack Mounting Bracket hole. Guide the foot plate into the jack's leg. Ensure the groove in the leg is aligned with the one on the foot plate. Do not insert the lock pin.
4. Position the jack to face your preferred operating position, either front, sideways or facing the rear.
5. The design of the vehicle may impair the use of the manual crank based on the jack's orientation.
6. Insert the three M10 bolts with M10 washers through the mounting plate and secure with the M10 lock nuts and washers.
7. Tighten the bolts ensuring the whole unit is tightly secured to the A-Frame.
8. Connect the 50amp Andersen plug to an exisiting Andersen plug.
9. Connect the supplied wiring harness to the Black Jack and the other end of the wiring harness to the 12 volt Battery (model BJTJ-1001).
10. Press the UP/DOWN switch to test that the connection is correct, and the jack is working. Also press the LIGHT ON/OFF Switch to confirm the light is working.
11. Push the foot plate up fully and insert the lock pin and retract the jack.
12. If installing the optional folding foot, please refere to the installation guide and warnings on page 13.

More information https://www.caravansplus.com.au

10. OPERATION


The UP/DOWN switch is OFF in its natural position. Press UP to extend the Black Jack and DOWN to retract the Black Jack. WARNING: When the Black Jack is fully extended or fully retracted the Intelli-Brake system will automatically cut power to the motor.

The ON\OFF switch is for the light only. It does NOT switch power on or off to the Black Jack

WARNING! Never apply horizontal force against the jack. The load may shift and cause the jack to fail, creating a dangerous situation for the user or bystanders.

11. REMOTE OPERATION

The included remote allows hands-free operation of the jack and can aid in simpler leveling of your caravan.
To operate the jack with the remote:
1. Press the ON button.
2. Press the UP button to extend the jack (raise the trailer).
3. Press the DOWN button to retract the jack (lower the trailer).
4. Always press the OFF button and slide the cover back up when not using the jack to avoid accidental operation.

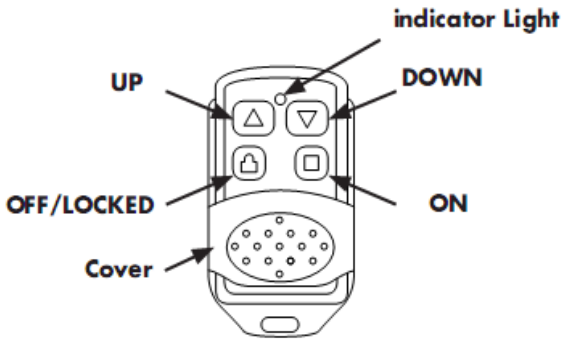

More information https://www.caravansplus.com.au

12. UNHITCHING THE TRAILER

Chock the trailer's wheels to prevent rolling.

Press the UP/DOWN switch, or use the remote, to extend the jack's leg until the foot plate contacts the ground and raises the trailer off the hitch.

If the fully extended leg does not reach the ground. Retract the leg until you have enough room to extend the foot plate. Remove the lock pin and lower the foot plate until it touches the ground.

Raise the foot plate upwards until the bolt holes in it align with the bolt hole in the leg. Insert the locking pin and close the clasp. Extend the Black Jack until the trailer is clear of the tow hitch.

Move the towing vehicle away from the trailer's hitch receiver.

Level the trailer by pressing the UP/DOWN switch or using the remote to raise or lower the jack. It is level once the bubble level is centered.

13. HITCHING THE TRAILER

Press the extend switch or use the remote to raise the trailer's hitch receiver above the level of the towing vehicle's hitch.

Align the towing vehicle's hitch with the trailer hitch receiver.

Press the DOWN switch or use the remote to lower the trailer hitch receiver onto the towing vehicle hitch. Secure the hitch receiver once seated.

Retract the Jack to its fully retracted position.

WARNING! The hitch receiver must be properly aligned and seated before retracting the leg fully to prevent it from slipping off the hitch and causing an injury to yourself or bystanders.

More information https://www.caravansplus.com.au

14. MANUAL OVERRIDE

A loss of power may require you to raise and lower the trailer using the manual crank.

Remove the crank cap and set aside.

Insert the manual crank onto the shaft in the housing. If the jack is under load, hold the handle firm otherwise the ball bearing worm drive may allow the jack to spin. This may allow the jack to lower freely, and the manual crank handle to spin.

Unlock the brake located underneath the motor using the included brake lever.





Crank clockwise to extend the leg. Crank counterclockwise to retract the leg. Follow the directions for hitching or unhitching the trailer.

Once finished, re-lock the brake.

Replace the crank cap when done and store the crank.

15. CARE & MAINTENANCE

Maintain the device with care. A Black Jack in good condition is efficient, easier to control and will have few problems. Inspect the device components periodically. Repair or replace damaged or worn components. Only use identical replacement parts when servicing.

Inspect and lubricate the device when required. Apply grease to the inner tube when extended and then retract to grease the outer tube

More information https://www.caravansplus.com.au

NEVER use a penetrating oil to lubricate the device. Penetrating oil may act as a solvent that can break down the grease and cause the device to seize up.

The Black Jack's motor is sealed and maintenance-free.

Check the wiring from time-to-time. Ensure all the connections are tight and free from corrosion.

16. OPTIONAL FOLDING FOOT

Your new Black Jack comes with a choice of two feet.

The silver steel foot is the traditional adjustable foot. You can manually adjust the height and it will tuck up under the chassis tightly.

The Black Jack folding foot will automatically drop from the horizontal position to the verticle position when the leg is extended saving time and without the need to manually adjust the foot. When retracting, the folding foot will automatically move from the vertical position to horizontal, again saving time.

The choice of feet to use is up to you and will be based on your individual set up and requirements.




More information https://www.caravansplus.com.au

16. OPTIONAL FOLDING FOOT

Black Jack Folding Foot Installation.

The folding foot must be installed so that it is clear of any obstructions. The folding foot must be able to freely extend and retract to its full extension and full horizontal retraction.

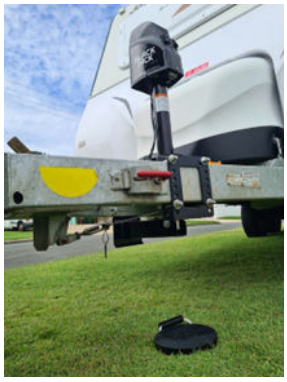



If the foot encounters an obstruction, for example:

- a chassis rail
- brake cables,
- Bottom of the Black Jack Clamp

before it is fully retracted to a horizontal position then there is a risk of serious internal mechanical damage to the Black Jack. The damage is caused by the leverage pressure (up to 3,500kg) the folding foot can add it if encounters an obstruction. This type of damage is NOT covered under warranty as it is a user installation error.

When installing the folding foot, make sure the Black Jack orientation allows for full clearance of the folding foot. This may mean rotating the orientation of the Black Jack. If the folding foot cannot be installed so that it is clear of obstructions, then DO NOT USE IT. Install the silver adjustable foot instead.

More information https://www.caravansplus.com.au

17. TROUBLESHOOTING

Contact Titan RV for a solution if the device does not function properly or parts are missing. If you are unable to do so, get a qualified technician to service the device. Also, check the troubleshooting guide below:

Problems	Possible Cause(s)	Suggested Solution(s)
Motor is not operating	No or Low Voltage	Check battery and electrical connections. Power supplied must be at least 12.2V DC. If the battery is low, plug the Black Jack into an alternative 12 volt supply to provide power to the Black Jack.
	No Power from trailer connector	Check the trailer connector has power. Replace or repair the trailer connectors or wiring.
Light Operates but not Motor	Low Voltage	Check voltage inside Black Jack is minimum 12.2 volts.
	UP/DOWN Switch is faulty	Check power at middle positive terminal on switch when UP or DOWN is pressed. If no voltage is shown then the switch is faulty.
Light and Motor not operating	Blown Fuse	Check fuse in the line to the power supply and replace with 30-40 amp fuse.
Manual Handle won't spin	Brake is still locked	The manual override requires the ball-bearing worm drive's brake to be release before you can manually operate the jack. Please see Section 14, page 11 for more information.

More information https://www.caravansplus.com.au

The 30-amp fuse keeps blowing

Normal operating range for a 300kg load is 8 amps retracting (DOWN) and up to 18 amps extending (UP). At a maximum weight of 2000kg, the Black Jack pulls 28 amps extending. So under normal operation the 30-amp fuse should not blow.

Problems	Possible Cause(s)	Suggested Solution(s)
Fuse keeps blowing	Poor Ground/Earth will cause the fuse to blow	A bad Earth or poor connections. Check all connections between the battery and Jack are tight. Check the earth point is secure and any connecting circuits.
	Folding Foot Obstruction	If the folding foot is not clear to fully retract, the Intelli-Brake motor will not automatically stop the motor. This can cause the fuse to blow, and cause damage to the jack. Please see Section 16, page 12 of this manual for more information.
	Poor power supply	Most common cause is the wire gauge used between the battery and Black Jack is too small. A minimum of number 8 B&S (7.2MM) wire used over 5 meters. We recommend our Harness Part No. BJTJ-HAR
		Use a 40 amp fuse

More information https://www.caravansplus.com.au

18. WARRANTY & PARTS

All replacement parts are available on the Black Jack Trailer Jack web site: www.blackjacktrailerjacks.com.au

For warranty replacement contact
Titan RV
Unit 5 Euro Business Park
26-34 Weippin Street Cleveland QLD 4163
P: +61 07 3286 1199 E: info@blackjacktrailerjacks.com.au

19. INTELLECTUAL PROPERTY

Registered Trademark
Black Jack® Trailer Jacks is a registered trademark in Australia owned by Titan Stability Solutions Pty Ltd.

Patent
The Black Jack Clamp is a registered patent in Australia (Patent NO 2021204066).

Registered Design
The Black Jack Clamp is a registered design pending in Australia.

Copyright

This "**Black Jack® Maxi 2000kg 12V DC** User Manual" is copyright protected and owned by Titan Stability Solutions Pty Ltd.

Domain Name
blackjacktrailerjacks.com.au is a registered domain name owned by Titan Stability Solutions Pty Ltd.

More information https://www.caravansplus.com.au

20. COMPLIANCE

1. **EMC Compliance**
   The Black Jack TM is EMC approved and compliant with:

   EN 61000-6-3:2007+A1:2011+AC:2012
   EN IEC 61000-6-1:2019
   EN IEC 61000-3-2:2019
   EN 6100-3-3:2013+A1:2019

2. **Australian Standards for Gas Installations in Caravans**
   Gas Installations in Caravans AS\NZS 5601.2.2020 (Standard)
   The Standard requires that an “ignition source” cannot be located within the clearances of an exchange gas cylinder.
   The standard defines an “ignition source” as “A source of energy that can ignite an explosive atmoshere”

   Note 1 to entry: Such sources include, but are not limited to flames, incandescent material, electrical sparks, hot surfaces, and mechanical impact sparks.

   Note 2 to entry: For the purposes of domestic caravans and boats, items of equipment within a controlled area that are non sparking by nature or encapsulated are NOT considered to be ignition sources.

   The Black Jack has been tested by an independent third party laboratory in Victoria and found to be compliant with the standard.

   A Summary of the test report confirms:

   The tested electric powered Caravan and Trailer Jack model BJTJ series complied with the below tested clauses of the standard AS\NZS 5601.2.2020 +A1 2021.

Clause 1.3.41	**Ignition Source Definition**
Clause 2.4.2	**Required Clearance**
Clause 3.1.8	**Required Clearance around a cylinder**
Clause 5.3	**Encapsulated devices**

   The testing was carried out based on the information observed on the actual samples.

   For a copy of the report please contact us.

More information https://www.caravansplus.com.au

ABOUT BLACK JACK®

Black Jack® Trailer Jacks is a division of Titan Stability Solutions Pty Ltd trading as Titan RV.

TITAN RV

Our range of brands include:

REDFOOT
LEVELLING

Hydraulic auto levelling system for motorhomes, caravans, specialty vehicles and 5th wheelers.

www.redfootlevelling.com.au

SWAYCONTROL
HITCHES

The best selling Sway Control and Weight Distribution Hitches in the USA now available in Australia.

www.swaycontrolhitches.com.au

BLACK JACK™
TRAILER JACK

Gone are the days of manually winding the jockey wheel to raise or lower the caravan or trailer.

www.blackjacktrailerjacks.com.au

More information https://www.caravansplus.com.au

BLACK JACK®

TRAILER JACK

CONTACT US

Black Jack® Trailer Jacks is a division of Titan Stability Solutions Pty Ltd

Titan RV
Unit 5 Euro Business Park
26-34 Weippin Street
Cleveland QLD 4163
AUSTRALIA

P: +61 07 3286 1199
E: info@blackjacktrailerjacks.com.au

V1
Feb 2025

www.blackjacktrailerjacks.com.au

More information https://www.caravansplus.com.au