
BACK TO WALL FLW25

INSTALLATION TEMPLATE
PRINT AT 100% SCALE (CHECK 390 mm DIMENSION)

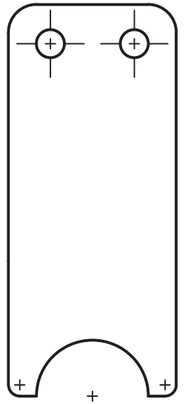

1. CUT THIS TEMPLATE AT THE DOTTED LINE TO POSITION THE REAR WASHING MACHINE BRACKETS SO THAT THE WASHING MACHINE IS AT ITS FURTHEST BACK POSITION TO ALLOW CLEARANCE FOR THE HOSES AND CLAMPS.

2. IF YOU REQUIRE MORE CLEARANCE AT THE BACK OF THE MACHINE, OR IF YOU WANT THE MACHINE TO SIT FURTHER FORWARD FOR AESTHETICS, SIMPLY MEASURE BACK FROM THE DOTTED LINE THE DESIRED AMOUNT.

3. ENSURE THERE ARE NO ELECTRICALS OR PLUMBING COMPONENTS BELOW THE FLOOR BEFORE SCREWING THE BRACKETS TO THE FLOOR THROUGH THE 4 MARKED HOLES (2 HOLES AT THE REAR OF EACH BRACKET).

4. ONCE REAR BRACKETS ARE FITTED, SLIDE THE MACHINE BACK, SECURE ALL WATER AND ELECTRICAL CONNECTIONS AND PUSH MACHINE BACK TO LOCATE ONTO THE BRACKETS.

5. LEVEL THE MACHINE VIA THE ADJUSTABLE FEET AND SECURE THE FRONT BRACKETS TO THE FRONT FEET TO LOCK THE MACHINE IN PLACE

