
Eezi-Awn Caravan

P.O Box 68323, Bryanston 2021
200 Cussonia Park, 3 Ridge Road,
Laser Park, Honeydew, South Africa
Tel: (011) 794-6311 • Fax: (011) 794-6233


OPERATING INSTRUCTIONS

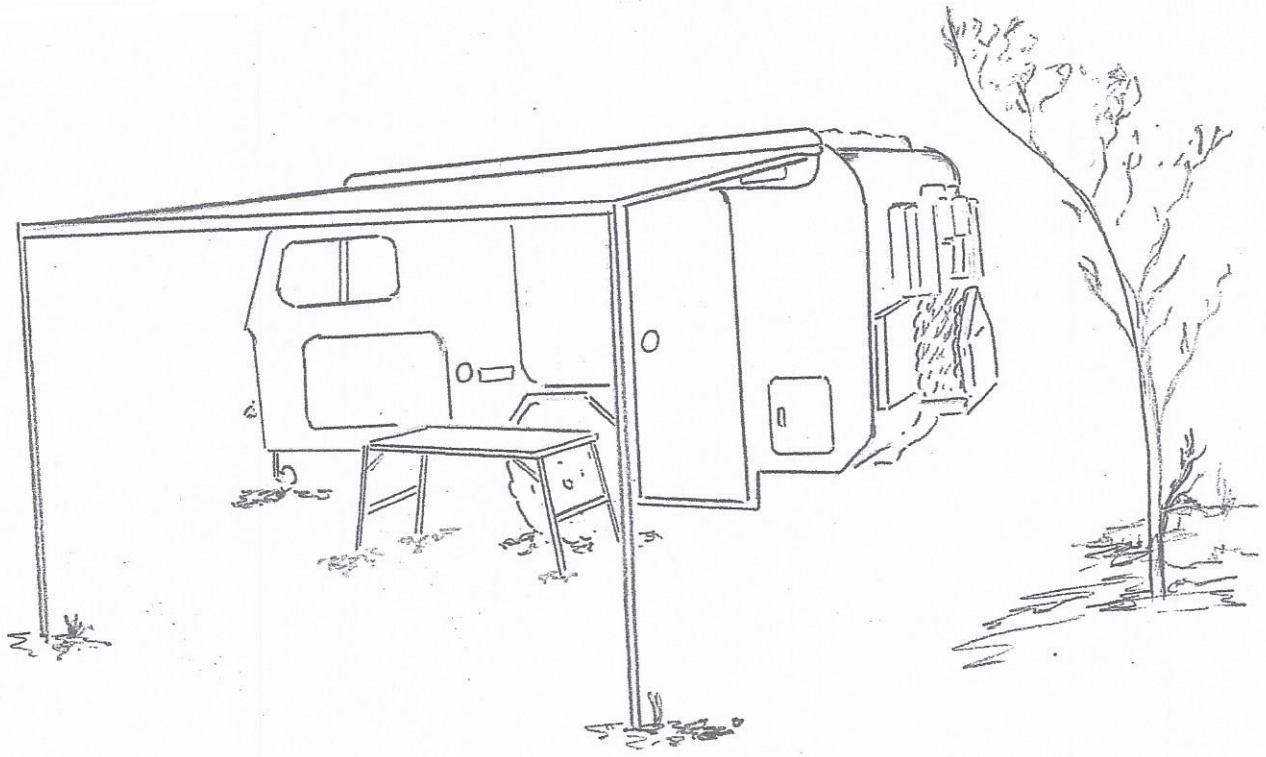


HELPFUL HINTS

1. Periodically clean the fabric with any detergent. (Let the fabric dry before rolling it up. This also helps prevent mildew.) Cleaning is especially important prior to storing the awning for long periods of time to prevent mildew and stains.
2. Use paraffin wax on Support Arms and Rafter Arms for smoother sliding movement.


TO OPEN

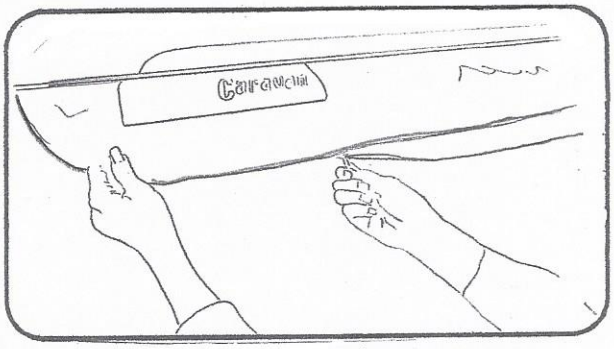


Unzip bag to open awning.

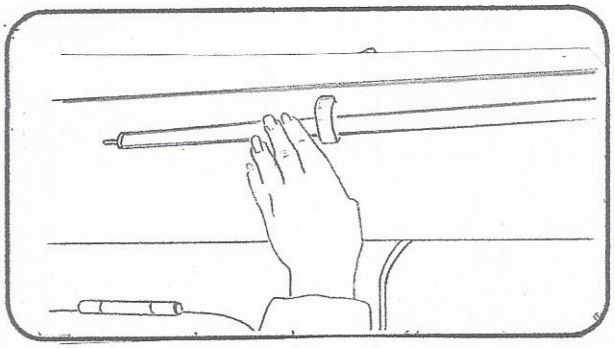


Loosen retaining strap and fold arms out.

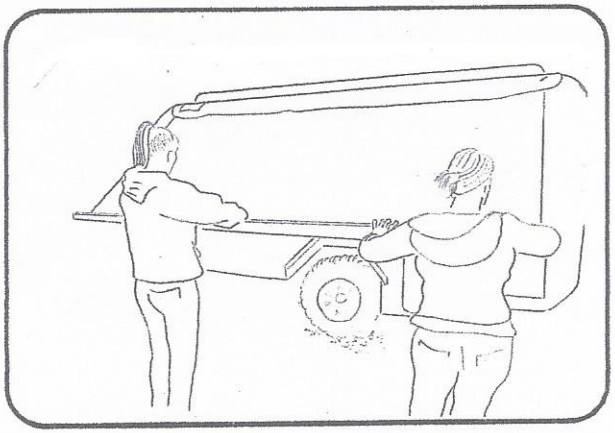


Roll fabric out of EEZI-AWN by holding front profile in the middle and walk backwards.

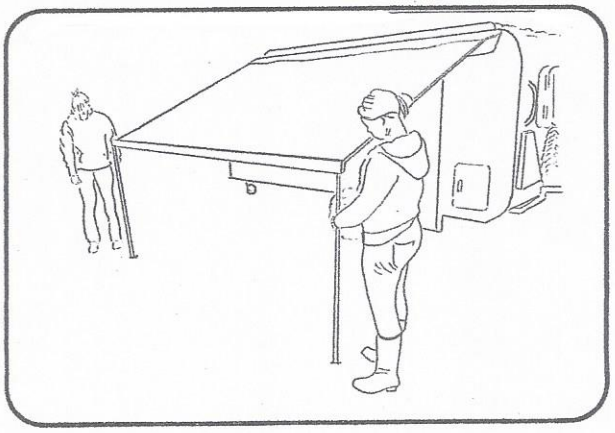


When the EEZI-AWN fabric is fully unrolled hold arms in front profile and let legs drop to the ground.

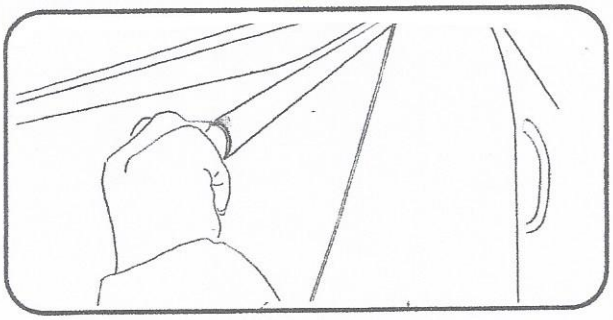


Reach in and pull arms out.

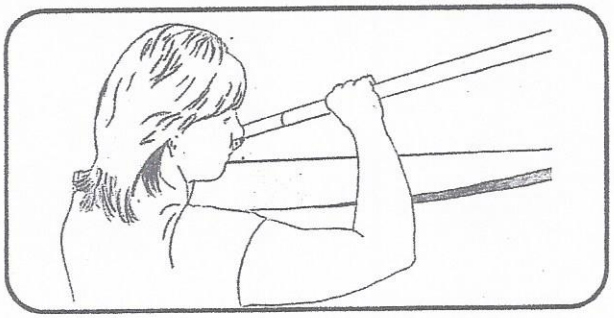


Take left and right arm, fully extend them, twist to lock in place.

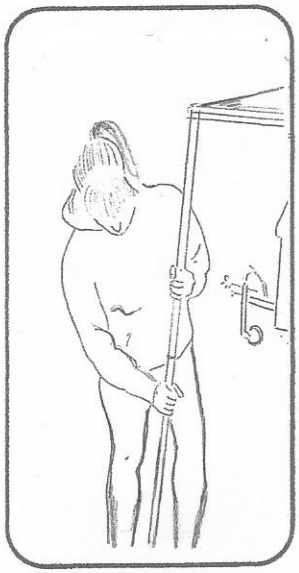

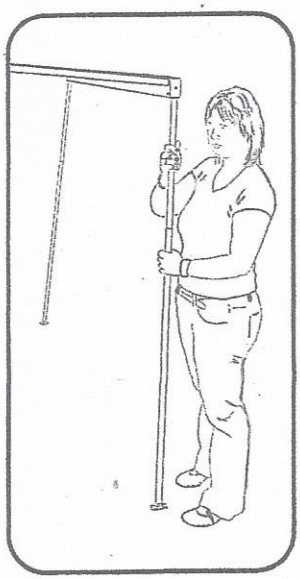


Extend legs to height required and twist to lock in place.


NB. Should it rain, drop one leg in order for water to run off EEZI-AWN.

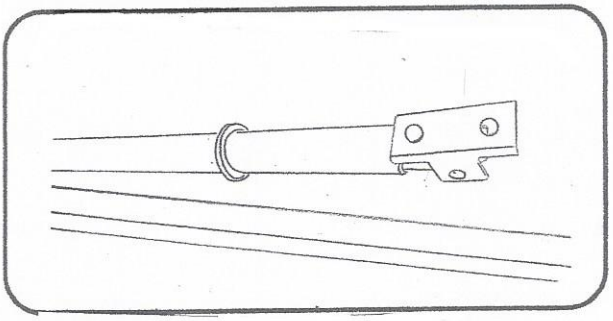

Pull legs out of front profile.

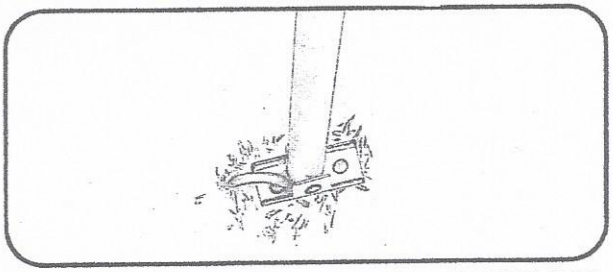


Peg the swivel foot to the ground to secure the EEZI-AWN.

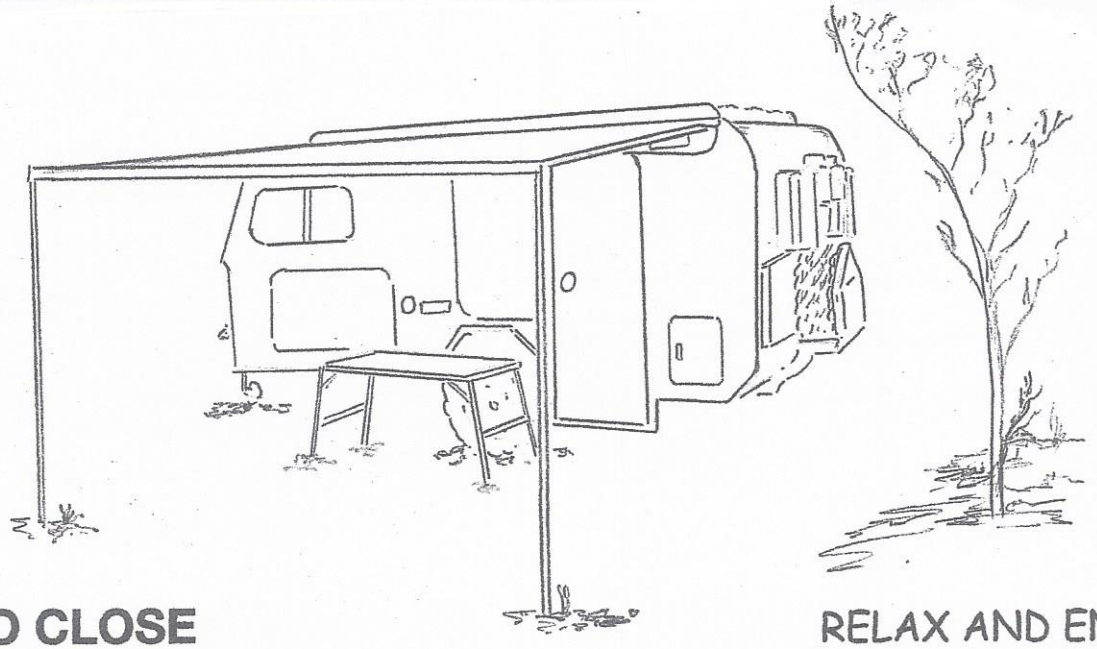


TO CLOSE


RELAX AND ENJOY!!!

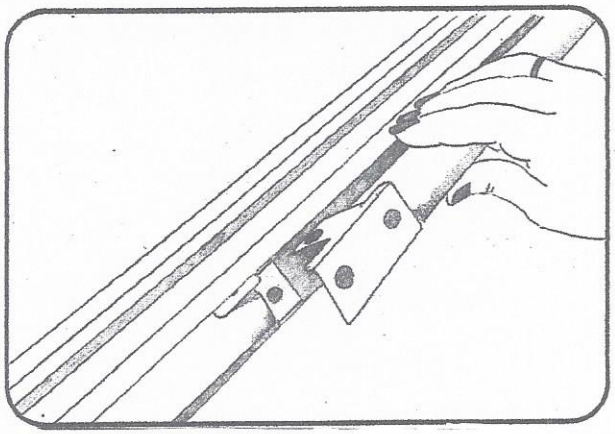


Fold legs back into front profile

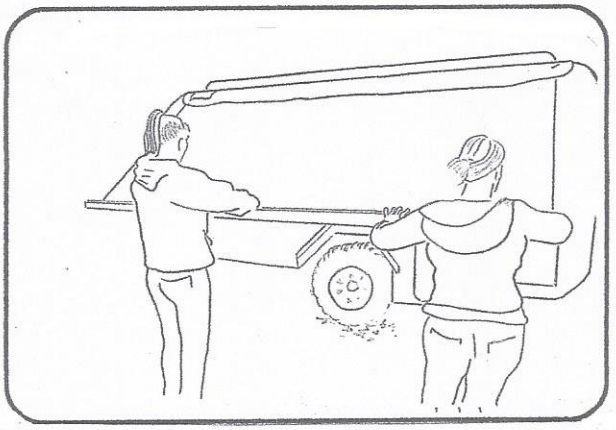


Hold Front profile and roll up fabric in a anti clockwise Direction in order to close.

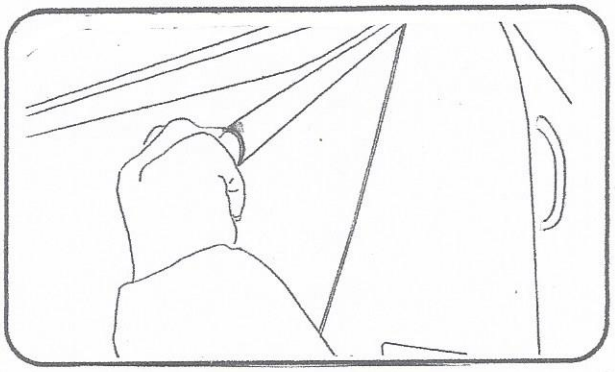


Side arm close and twist lock.

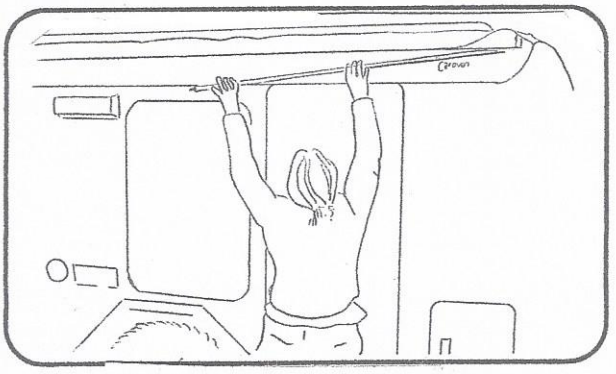

Fold arm back into bag.

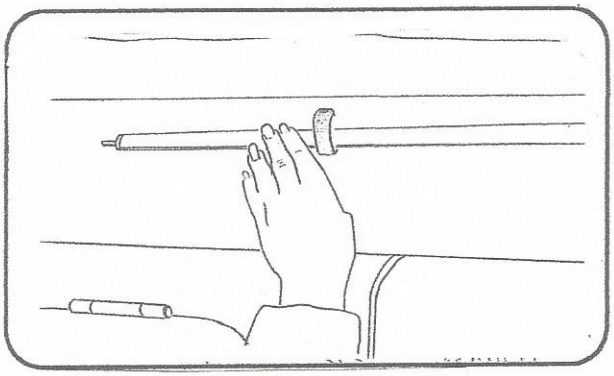


Secure arm with strap provided.

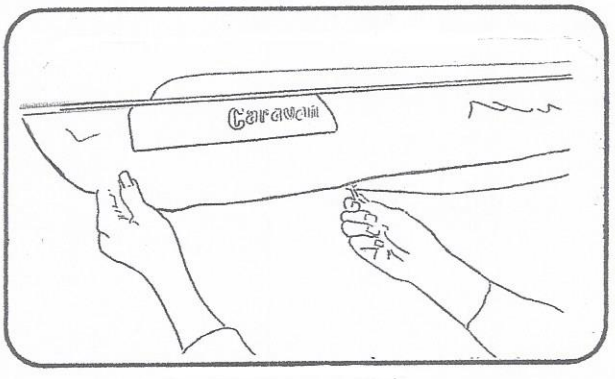


Zip bag closed .


INSTALLATION

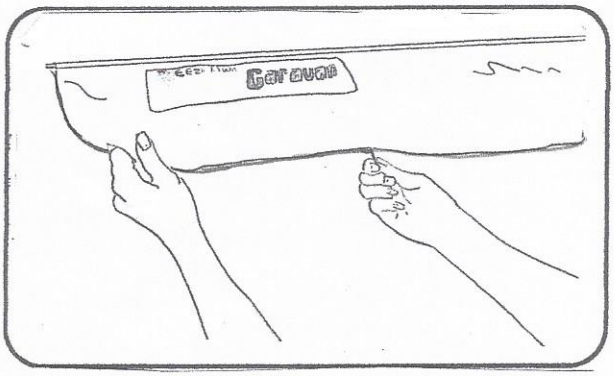


Open awning bag and remove front profile.

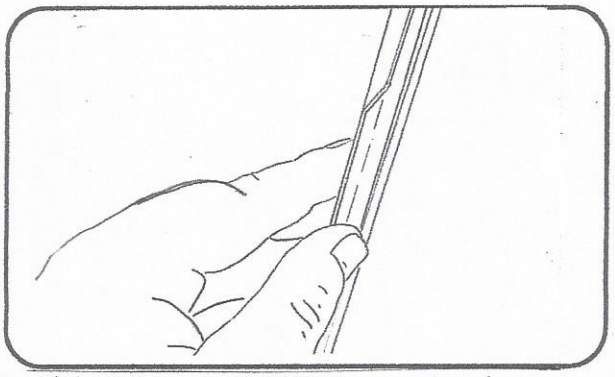


Slide awing into aluminium extrusion slot .

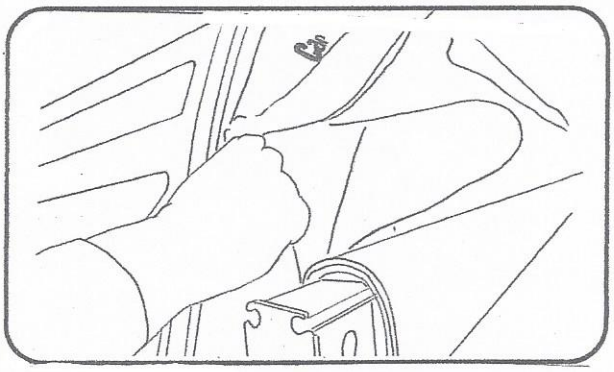


Help to feed awning into aluminium extrusion.

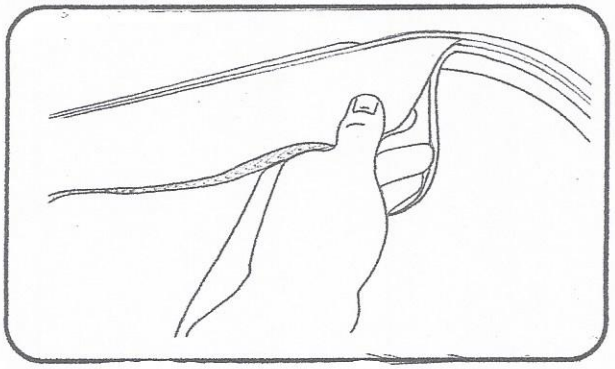

Pull awning along the slot.

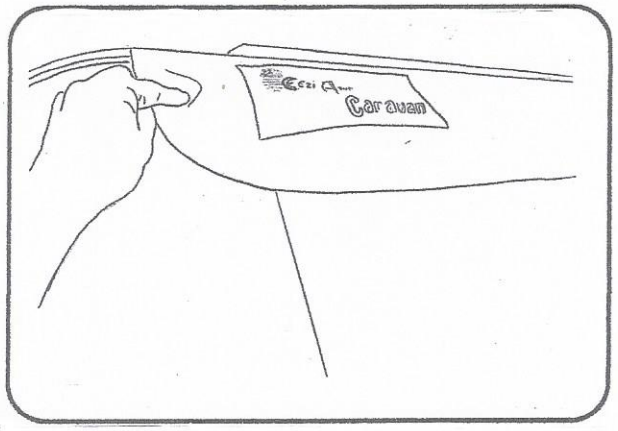

Stand back and centre awning on caravan to the desired spot.

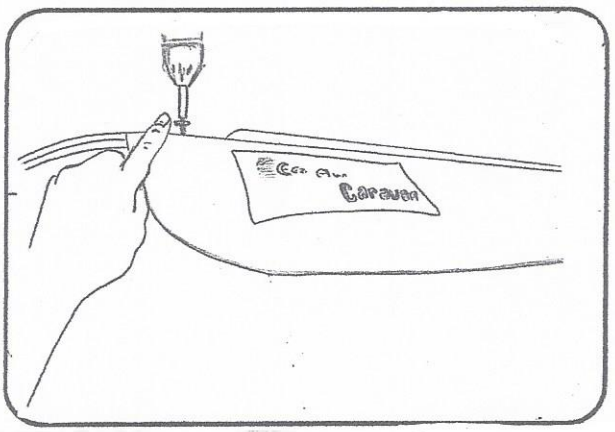

Drill a small hole in the extrusion and secure awning with self tapper.

JOB WELL DONE !!!!

